

# Jandy Pro Series Never Lube® 1½"- 2" Two Way PVC Valve Installation Instructions

# **WARNING**

FOR YOUR SAFETY - This product must be installed and serviced by a contractor who is licensed and qualified in pool equipment by the jurisdiction in which the product will be installed where such state or local requirements exist. The maintainer must be a professional with sufficient experience in pool equipment installation and maintenance so that all of the instructions in this manual can be followed exactly. Before installing this product, read and follow all warning notices and instructions that accompany this product. Failure to follow warning notices and instructions may result in property damage, personal injury, or death. Improper installation and/or operation will void the warranty.

### **PLUMBING**

One valve is designed for both  $1\frac{1}{2}$ " and 2" pipe.  $1\frac{1}{2}$ " pipe slip fits into valve ports. 2" pipe is joined using  $2\frac{1}{2}$ " pipe coupler.  $45^{\circ}$  or  $90^{\circ}$  fitting. See drawing on this page.

Internal valve assembly must be removed prior to gluing valve body to pipe fittings. Make certain no glue enters valve body beyond the ports.


WELD-ON® PVC GRAY IS RECOMMENDED.

## VALVE HANDLE USE

**Lock Knob** - Loosen lock knob to turn handle. To secure handle, turn knob down finger tight. See drawing on this page.

**Off Indicator -** OFF area on indicator represents exact position of internal valve diverter seal.


Handle Stops - Protruding pins located on valve cover will stop diverter in complete port shutoff position. Be sure the word "INLET" on valve cover is over the incoming flow port.

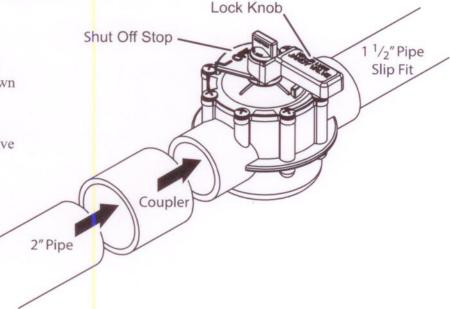

# Valve Complete, Positive Seal, 2724

Item No	Part No	Description	Qty
1	1298	#14 x 3/4" Valve Housing Screw	8
2	R0487000	Knob (ABS) Gray	1
3	R0642300	Valve Handle Never Lube® Gray	1
4	R0642100	Valve Cover (2-Port) Gray	1
5	1132+	151 O-Ring	1
6	R0487100	116 O-Ring	2
7	4720	Diverter Assembly Complete (Positive) Never Lube®	1

NOTE The valve housing is not available as a separate part. To replace the valve housing, you must replace the entire valve.

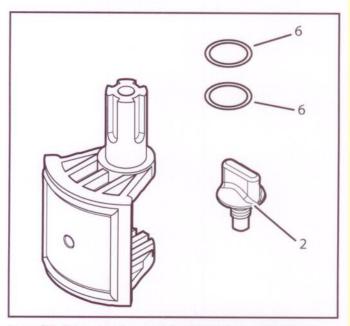

Item #7. Diverter Assembly Complete with Knob

NOTE Item 7 (Part 4720) includes a Pipe Plug P-18, but you can discard it, because it is not needed with this valve.

Zodiac Pool Systems, Inc. 2620 Commerce Way, Vista, CA 92081 1.800.822.7933 | www.Jandy.com

©2016 Zodiac Pool Systems, Inc. ZODIAC® is a registered trademark of Zodiac International, S.A.S.U., used under license. All trademarks referenced herein are the property of their respective owners.

H0500100 Rev C

